



To replace a digital or analog gauge with a new or different one, a crescent wrench can be used to keep the main shaft from spinning free from the body. Open the jaw to fit around the shaft and brass bleed button. Be firm but gentle when unscrewing the gauge to break the Loctite seal. Use a 9/16 open end wrench. The new gauge should have a drop of Loctite before tightening. We recommend removable Loctite such as 545.