

SUPER SCALE / THERMOMETER

Use this scale to check the CO2 level in your Power Tank and check the room/air temperature while you're at it.

Specifications:

- Zero out and tare weight
- Large LCD display
- Back lit numbers
- 110 lb. maximum
- .02 lb. graduations
- Battery: Lithium CR2032

To weigh your Power Tank:

1. Push the power button and wait until LCD shows zero.
2. If it does not read zero push and hold the power button until the reading zeros itself.
3. Push "UNIT" button to select wt. unit (lb. or kg.)
4. Strap the webbing belt through the Power Tank handle and secure the hook of the belt to the triangle ring.
5. Hold the scale and hang your Power Tank from the belt watching the digital readout.
6. Wait until the weight reading stops and flashes 3 times.
7. Now your weight is locked and you can lower your Power Tank back down to the floor.
8. Compare this weight to your "empty weight". All weight above your empty tank weight is the weight of the CO2 that is in your Power Tank.
9. Press Z/T to reset the display to zero.
10. The scale will automatically switch off if idle for 1 minute.
11. If the display shows "Lo" it's time to change your battery.